vassity®

ELONGATED Square Design

ONE PIECE TOILET



SLATE™ Model No. **VTO3116-W**

UPC C ®

Made in China

Installation Guide: _____

READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT!

Notes before installation:

1. Examine the toilet for any potential shipping-related damages.
2. Adhere to all plumbing and construction regulations as per your state and local guidelines.
3. Please note that the provided dimensions are approximate. It is advisable to measure your toilet before proceeding with installation.
4. The installation instructions offer a general overview of the process. If any disparities arise, Vassity cannot accept liability. For optimal results, we suggest enlisting the services of a licensed professional for all Vassity product installations.
5. Familiarize yourself with the installation and maintenance instructions before commencing the process. Always use the appropriate tools and ensure your safety by wearing the necessary personal protective equipment.
6. Given the fragility of this product, we recommend having two individuals handle and install it.


INCLUDED PARTS:




One-Piece Toilet
(Pre-installed Soft-Close Seat)



Wax Ring/Gasket



Bolts




Cover Caps


SUGGESTED TOOLS & MATERIALS:




Wrench



Tape Measure



Screwdriver



Level



Supply Line

1 Turn Off Water Supply




· Turn off the toilet supply valve and flush the tank entirely, then use a towel to remove any remaining water.

· If you are replacing the valve, disconnect and remove the supply line. Be sure to shut off the main water supply first.

· Eliminate the closet bolts from the flange and clean any wax and putty residue from the base area.


2 Rough-In the Toilet

Measure the distance from the back of the toilet to the center of the closet bolt. Your rough-in measurement should be 12 inches.

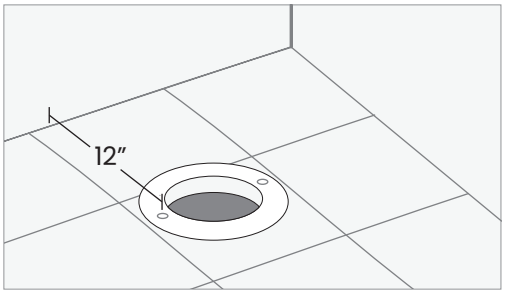


3 Install the Closet Bolts

the closet bolts into the flange channel, rotate them 90 degrees, and position them 6 inches (152mm) apart, running parallel to the wall.

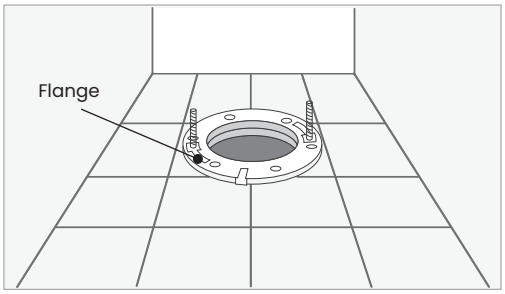

4 Install the Wax Seal Ring

Gently turn the toilet upside down on the floor, using a cushion to prevent any damage. Evenly place the wax ring around the waste flange with the tapered end of the ring facing the toilet. Apply a thin bead of sealant around the base of the toilet.

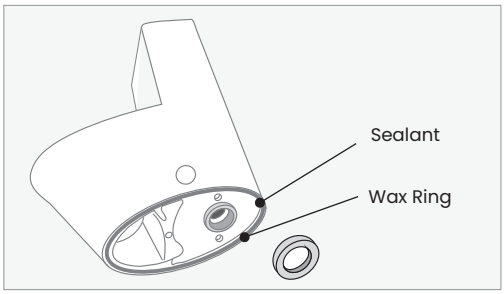


5 Position the Toilet on the Flange

· Hand-tighten the water supply hose to the fill valve located at the back of the toilet, but do not connect it to the water supply just yet.

· Align the floor waste opening with the toilet and place it onto the closet flange so that the bolts project through the mounting holes.


· Securely but loosely install the retainer washers and nuts.

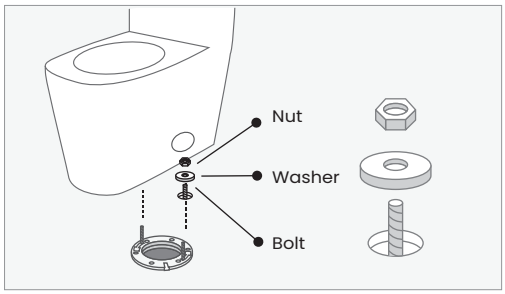

6 Complete Toilet Installation

Align and firmly press the toilet onto the wax ring and flange, rocking gently if needed. Gradually tighten the nuts to secure it to the floor, avoiding over-tightening to prevent ceramic damage.


Smooth the sealant, apply cover caps, and connect the water supply, checking for leaks and tightening if necessary.

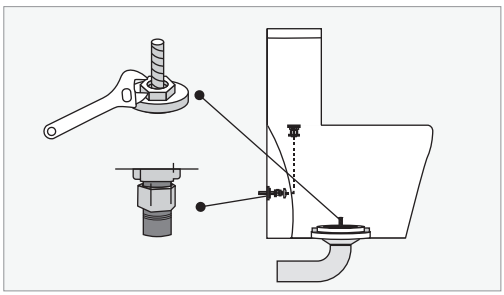



SPECIFICATIONS

SLATE™ Model No. **VTO3116-W**



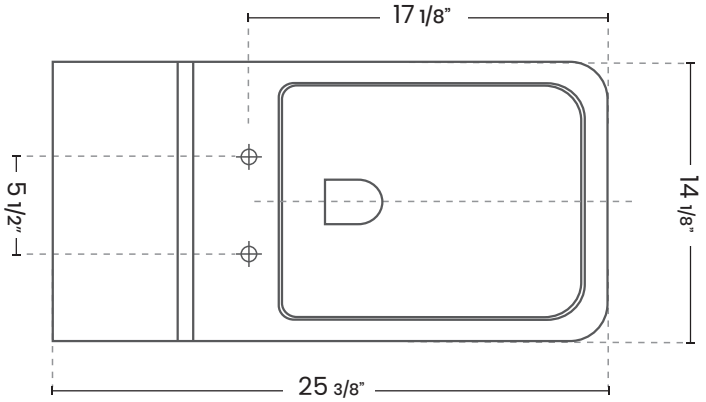

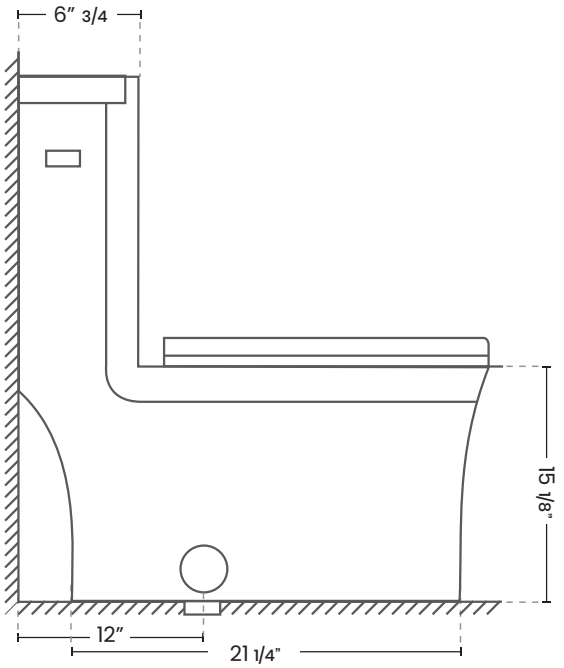

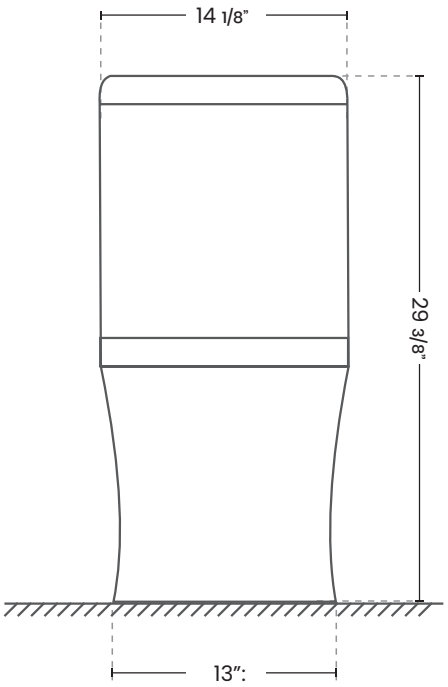

vassity®

1-973-592-5000
info@vassity.com | www.vassity.com